

Pair with PTT-U1

Power off PTT-U1
Power off Dongle
Power on Radio

Plug Dongle to Radio

Press Dongle PTT and power on Dongle side switch.
Blue LED is 2 flashes/S, release PTT and press PTT again, LED is 3 flashes/S, release PTT. (Dongle is in PTT pairing mode)

Power on PTT-U1

Dongle LED is 1 flash/S
PTT-U1 is paired

But the PTT-U1 can't PTT now. Because no AirPods paired.
You need to power off PTT-U1.

Pair with AirPods

Power off PTT-U1
Power off Dongle
Power on Radio

Press Dongle PTT and power on Dongle side switch.
Blue LED is 2 flashes/S, release PTT.
(Dongle is in AirPods pairing mode)


Long press AirPods box button and open box to pairing mode

Dongle LED is 1 flash/4S
AirPods is paired

Power off PTT-U1
Power off Dongle

Power on PTT-U1 first
Power on Dongle
Take out AirPods 2pcs

3 devices all linked and ready to go

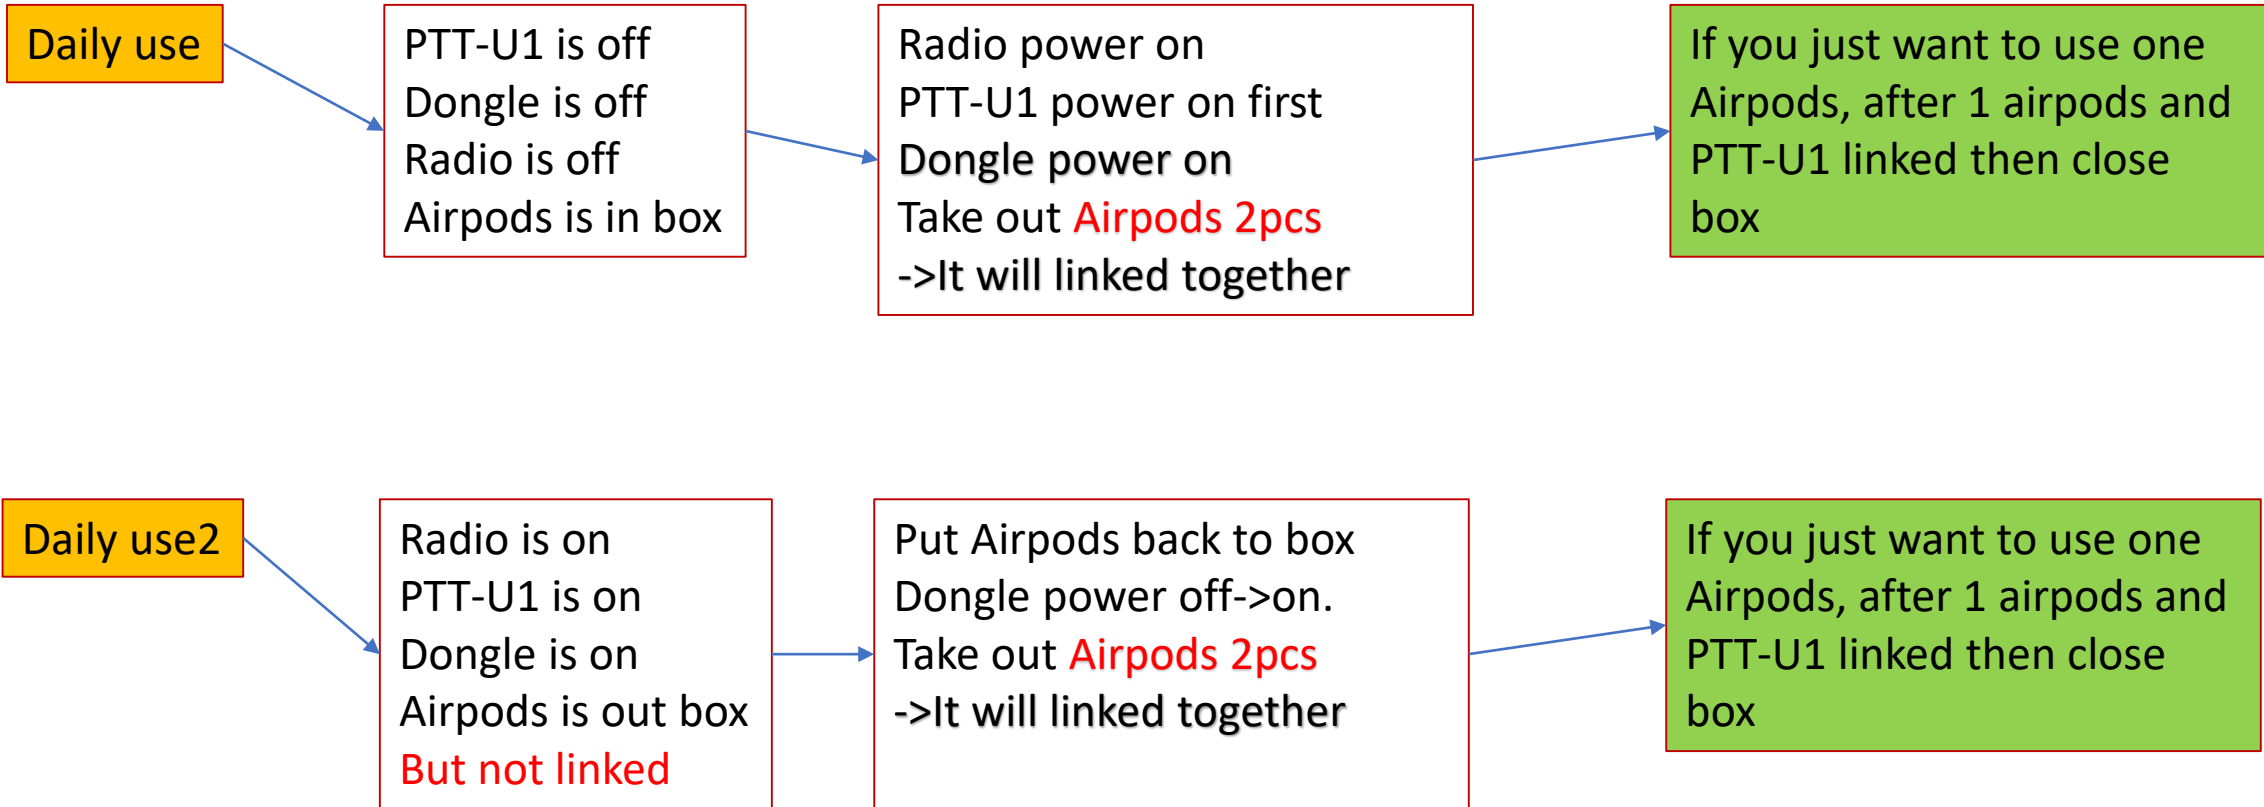

PS: Don't close box before Aipods and PTT-U1 linked to Dongle. OR you need open the box again.