 



# BTH-300-R6/BTH-500-R6/BTH-600-R6 for GroupTalk Android User Manual

## 1 Note:


- 1.1 Sometimes other PoC App will affect the PTT or microphone/speaker function of GroupTalk, to make sure BTH-x00-R6 RSM is working properly with GroupTalk, please “Force Stop” other PoC Apps. To force stop the App, go phone’s “Settings” -> “ APPs (or Application manager)”, find the App you want to stop then choose “Force Stop”. Especially Zello,InstantTalk.....

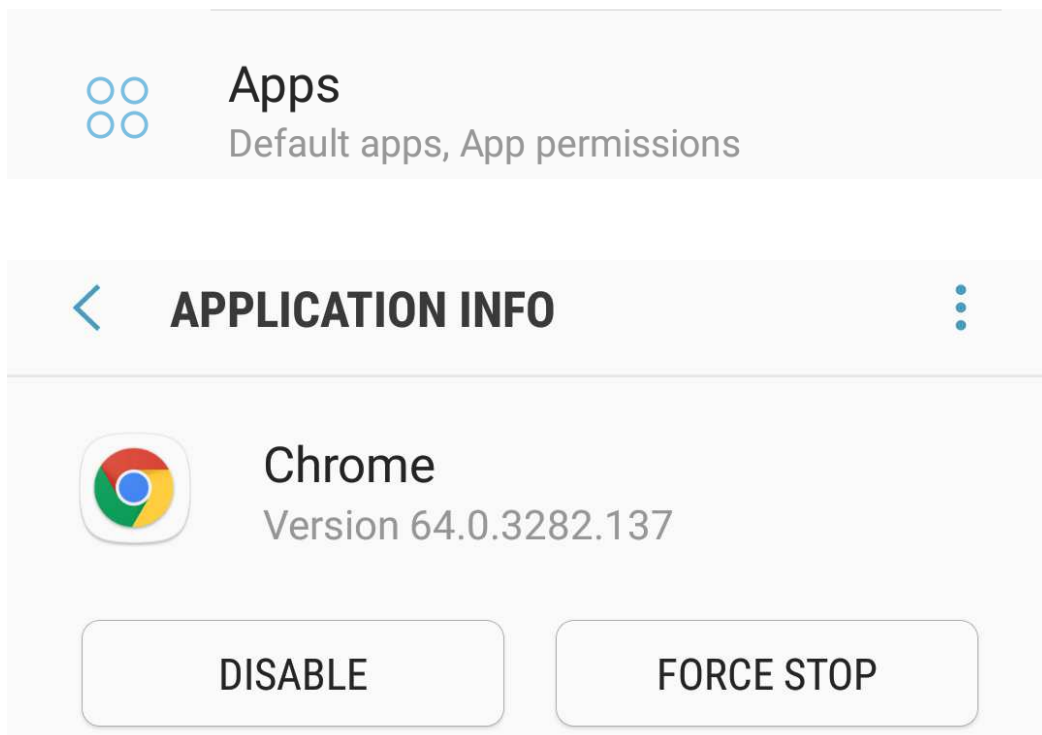

 - 1.2 When using BTH-x00-R6 RSM, there’s no need Bluetooth LE device as the PTT button, so if you already choose PTT-Z as the PTT button, please remove it or assign it as a “Emergency Button”. To disable Bluetooth LE device(PTT-Z), run GroupTalk and go “Settings”

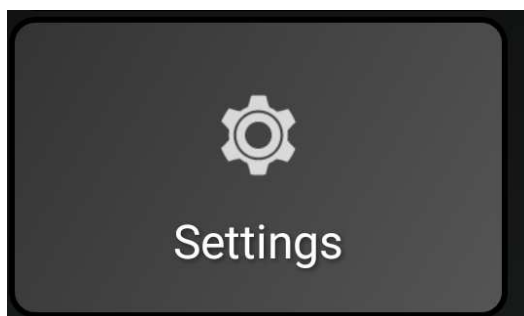


scroll down search for “Bluetooth LE Buttons” and tap on it

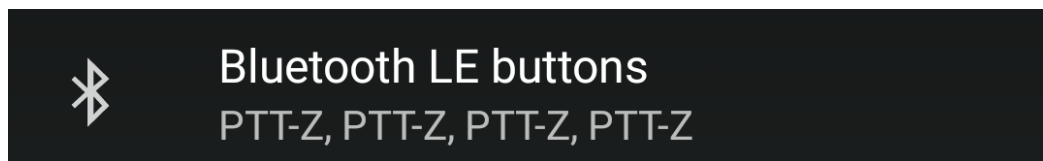

if your PTT-Z already connected to GroupTalk, you will see a connected icon on the right and “Used as PTT button” below the name.



to disable it, tap on it and an option list pops up:

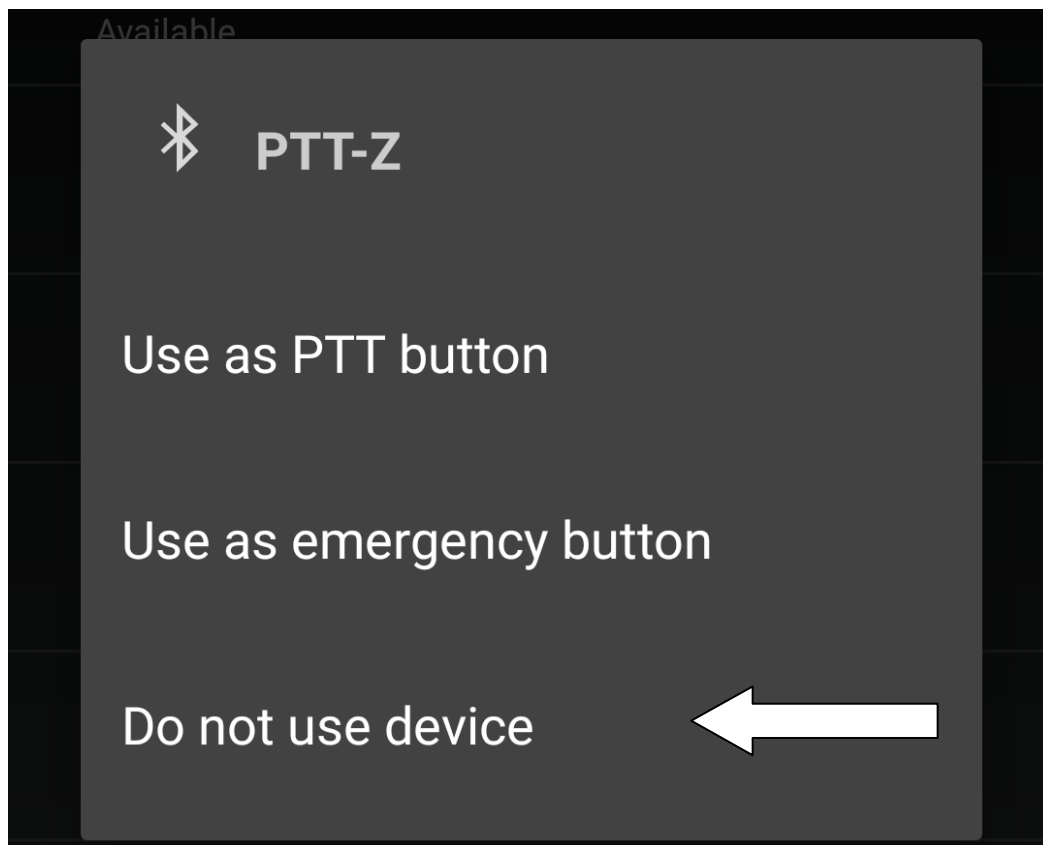

select “Do not use device” or “Use as emergency button” to remove PTT-Z’s PTT function.

## 2 Now it is ready to pair BTH-x00-R6 with the cell phone

### 3 Pairing BTH-x00-R6 with your Android phone:

- 3.1 Go phone’s “Setting” -> “Bluetooth”, make sure Bluetooth is turned on and scan for Bluetooth device, wait for few moment and your PTT device should be found, depending on different devices, the names will varied, for example **BTHR-PTT** is the device name of BTH-3/5/600-R6:

#### AVAILABLE DEVICES



BTHR-PTT

tap on it, it will be paired then connected

#### AVAILABLE DEVICES



BTHR-PTT

Pairing...

#### PAIRED DEVICES




BTHR-PTT

Connected for call and media audio



3.2 After BTH-x00-R6 is connected to the phone, run GroupTalk and go “Settings”

3.3 Scroll down and find “Bluetooth audio”, make sure it is checked.

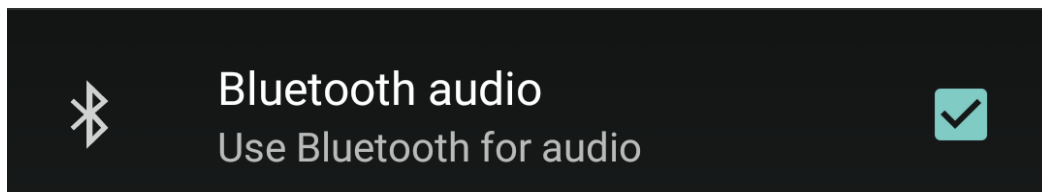

3.4 Now BTH-x00-R6 is ready to use with GroupTalk.