

 
PTT-BTTalk(for Midland) User Manual

Android/iOS


Android phones :

1. Connect to phone: turn on PTT-BTTalk and go phone's "setting", turn on Bluetooth, a device named "Midland BTT Button" shows up, tap on it to connect the phone.

Paired devices



2. After connected, exit setting and run Midland App, initially PTT-BTTalk is not connected to the App, tap on "connect" icon to establish the connection.

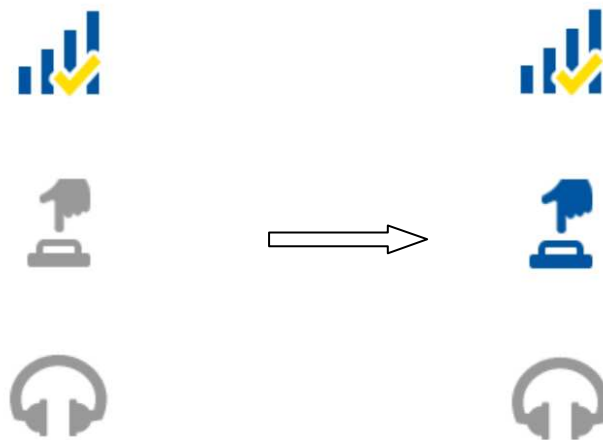

3. Now PTT-BTTalk is ready to use.


Note:

- 1 PTT-BTTalk will save paired info and remember the last phone it connected, if want to apply PTT-BTTalk to a different phone, follow the steps below:
 - 1.1 Turn on PTT-BTTalk and make sure PTT-BTTalk is not connected to any phone
 - 1.2 Press PTT button for 10 seconds to erase the paired info

1.3 PTT-BTtalk is ready to pair/connect to different phone.

On iPhone:

1. Setting up PTT-BTtalk on iPhone is exactly same as in Android phones, follow the steps in Android section to connect PTT-BTtalk to iPhone.

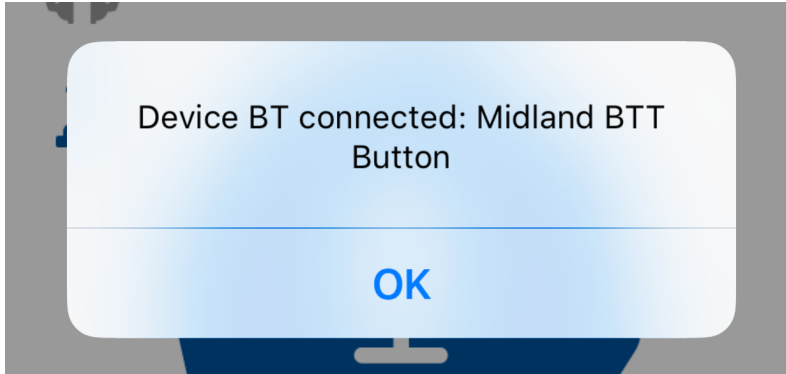

2. Now PTT-BTtalk is ready to use:

