

Mobility Sound

全笙科技有限公司


PTT-100

Bluetooth Speaker

Microphone

User Manual

1. Introduction to the product

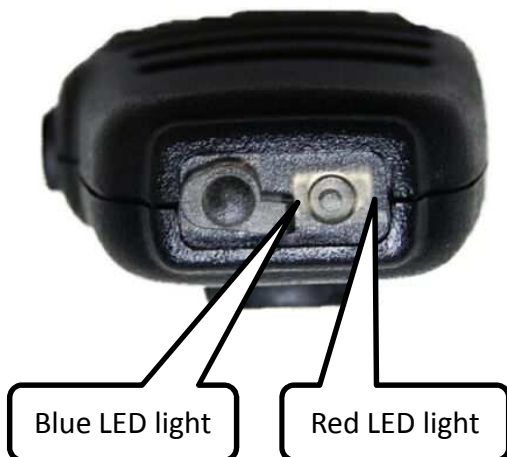

2. Pairing with your Bluetooth Speaker Microphone



1. Press the power button down and hold it for 5 seconds.
2. The LED blue and red light flashing alternately.
3. Release button then headset will go into pairing mode.

3. Pairing with your Mobile Phone



Note: After connected if it can't auto-linked, push the power button once the PTT-100 will automatically connect again.

How to -		LED status
Turn on	Press Power button for approx. 2 sec. (while PTT-100 is off)	Blue LED blinking
Turn off	Press Power button for approx. 5 sec. (while PTT-100 is on)	Red LED blinking 3 times then off
Pairing Mode	Press Power button for approx. 5 sec. (while PTT-100 is off)	Red & Blue LED flashing alternately
PTT	Press PTT button while PTT-100 paired with BT Dongle	Red LED on when button pressed

MobilitySound Technology LTD.

www.mobilitysound.com

info@mobilitysound.com